


2011 **ALTIMA**

QUICK REFERENCE GUIDE



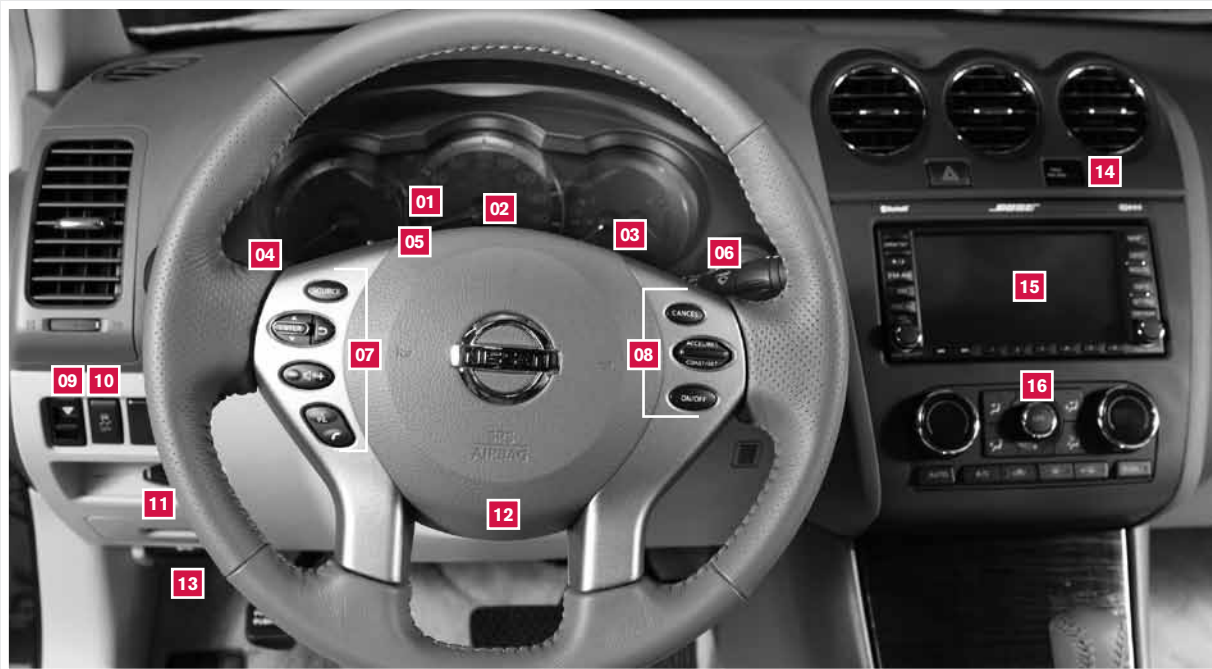

- 01** LOW TIRE PRESSURE WARNING LIGHT
- 02** VEHICLE INFORMATION DISPLAY*
- 03** TWIN TRIP ODOMETER / TRIP CHANGE BUTTON*
- 04** HEADLIGHT AND TURN SIGNAL CONTROL

- 05** INSTRUMENT BRIGHTNESS CONTROL*
- 06** WINDSHIELD WIPER / WASHER SWITCH
- 07** STEERING WHEEL SWITCHES FOR AUDIO / BLUETOOTH®
- 08** CRUISE CONTROL

- 09** TRUNK LID OPENER
- 10** VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH*
- 11** INTELLIGENT KEY PORT*
- 12** TILT / TELESCOPIC STEERING COLUMN*

- 13** HOOD RELEASE*
- 14** FRONT PASSENGER AIR BAG STATUS LIGHT*
- 15** AUDIO AND NAVIGATION SYSTEM
- 16** AUTOMATIC CLIMATE CONTROLS

*See your Owner's Manual for more information.

ESSENTIAL INFORMATION

Loose Fuel Cap 2
 Tire Pressure Monitoring System (TPMS) 2

FIRST DRIVE FEATURES

NISSAN Intelligent Key™ System 3
 Power Seat Adjustments (if so equipped) 3
 Outside Mirror Control Switch 3
 Starting/Stopping the Engine 4
 Headlight Control Switch 4
 Windshield Wiper Switch 5
 Automatic Climate Controls (if so equipped) 5
 FM/AM/XM® Radio with CD/DVD Player (if so equipped) 6
 Parking Brake 6
 Trunk Lid Release 7
 Fuel-Filler Door 7

SYSTEM GUIDE

Cruise Control 8
 Bluetooth® Hands-free Phone System (if so equipped) 8
 Navigation System (if so equipped) 8
 HomeLink® Universal Transceiver (if so equipped) 9



- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the **“Safety -- Seats, seat belts and supplemental restraint system (section 1)”** of your Owner’s Manual.



Additional information about your vehicle is also available in your Owner’s Manual, Navigation System Owner’s Manual, Electronic Quick Reference Guide (EQRG) and at www.nissanusa.com.




This easy-to-use Quick Reference Guide is intended to help you more fully appreciate some of the unique features and functions of your new vehicle. However, it is not intended to replace your Owner’s Manual. The Owner’s Manual contains more detailed information to help you better understand the important safety warnings, features, operation and maintenance of your vehicle. All information, specifications, photographs and illustrations in this publication are those in effect at the time of printing. NISSAN reserves the right to change specifications or design without notice and without obligation.

LOOSE FUEL CAP

- A LOOSE FUEL CAP warning message will display in the vehicle information display **01** when the fuel-filler cap is not tightened correctly.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light SERVICE ENGINE SOON may illuminate.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

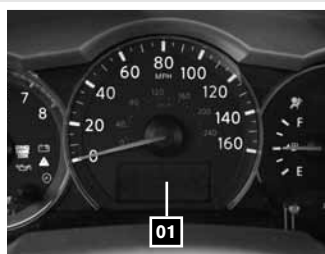

TIRE PRESSURE MONITORING SYSTEM (TPMS)

- A CHECK TIRE PRESSURE warning message will display in the vehicle information display **01** and the TPMS light will illuminate when one or more tires are low on pressure and air is needed.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25km/h) and the warning and indicator light will disappear.
- When the low tire pressure warning light flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by a NISSAN dealer.
- Tire pressure rises and falls depending on the heat caused by the vehicle’s operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates in low ambient temperature, check the tire pressure in all four tires.



For more information, refer to the “**Instruments and controls (section 2)**” and the “**Starting and driving (section 5)**” of your Owner’s Manual.

NISSAN INTELLIGENT KEY™ SYSTEM

The NISSAN Intelligent Key™ System allows you to lock or unlock your vehicle, open your trunk and start the engine.

- To lock or unlock the driver's or front passenger's door, push the door handle request switch **01** once.
- Push the door handle request switch **01** within 5 seconds of unlocking the door and all other doors will unlock.

NOTE: It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.



POWER SEAT ADJUSTMENTS (if so equipped)

- Push the control switch **01** forward or backward to slide the seat forward or backward.
- Push the switch **02** forward or backward to adjust the angle of the seatback.


SEAT LIFTER (if so equipped for driver's seat)

- To adjust the angle and height of the seat cushion, push the front or rear end of the switch **01** up or down.

LUMBAR SUPPORT (if so equipped for driver's seat)

- To adjust the seat lumbar area, push the switch **03** forward or backward.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)" of your Owner's Manual.

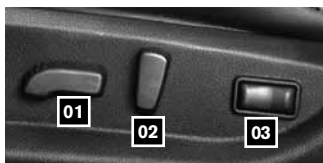

OUTSIDE MIRROR CONTROL SWITCH

- Turn the control switch right or left to select the right or left side mirror.
- Move the control switch up, down, right or left to adjust the mirror angle.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.



first drive features

STARTING/STOPPING THE ENGINE

CONTINUOUSLY VARIABLE TRANSMISSION
(if so equipped)

- Depress the brake pedal.
- Move the shift lever to P (PARK).
- Push the ignition switch to **START**.

NOTE: It is important to make sure the NISSAN Intelligent Key™ is with you (that is, in your pocket or purse).

MANUAL TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Move the shift lever to N (Neutral).
- Depress the clutch pedal to the floor.
- Push the ignition switch.

TURNING THE ENGINE OFF

- For a Continuously Variable Transmission, move the shift lever to the P (PARK) position, apply the parking brake and push the ignition switch.
- For a manual transmission, apply the foot brake, place the vehicle in first gear, apply the parking brake and push the ignition switch.

EMERGENCY ENGINE SHUT OFF

To shut off the engine in an emergency situation while driving, perform one of the following procedures:

- Rapidly push the push-button ignition switch 3 consecutive times, or
- Push and hold the push-button ignition switch for more than 2 seconds.


For more information, refer to the “Starting and driving (section 5)” of your Owner’s Manual.



HEADLIGHT CONTROL SWITCH

- Turn the headlight control switch **01** to the  position to turn on the front parking, tail, license plate and instrument panel lights.
- Turn the switch **01** to the  position to turn on the headlights.


For more information, refer to the “Instruments and controls (section 2)” of your Owner’s Manual.

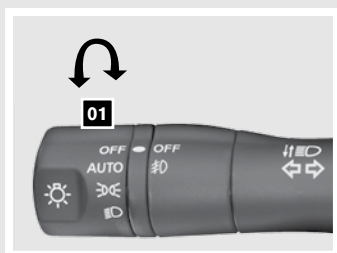

WINDSHIELD WIPER SWITCH

- Move the lever to the following positions to operate the windshield wipers:

- 01** Mist (**MIST**) - One sweep operation of the wipers.
- 02** Intermittent (**INT**) - Operates speed-sensing wiper system intermittently.
- 03** Low (**LO**) - Wipers operate at a continuous low-speed.
- 04** High (**HI**) - Wipers operate at a continuous high-speed.

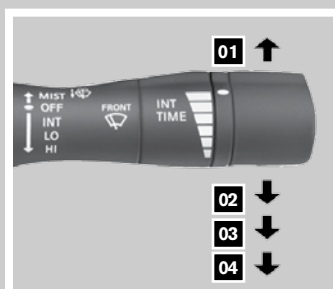

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.



AUTOMATIC CLIMATE CONTROLS (if so equipped)

01 AUTO BUTTON

- Press the **AUTO** button to turn the system on and the fan speed, air flow distribution and temperature will be automatically maintained.


02 TEMPERATURE CONTROL DIALS

- Turn the temperature control dial left for cooler air or right for warmer air.

03 FAN SPEED CONTROL DIAL / OFF BUTTON

- Turn the dial to the left to decrease fan speed or to the right to increase fan speed.
- Press the button to turn the system **OFF**.

04 DEFROSTING / DEFOGGING FRONT AND SIDE WINDOWS

- Press the front window defroster button  to turn the system on or off.

05 REAR WINDOW AND OUTSIDE MIRROR (if so equipped) DEFROSTER SWITCH

- Push the rear window defroster switch **RR**  to turn the system on or off.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

first drive features



FM/AM/XM^{®*} RADIO WITH CD/DVD PLAYER (if so equipped)

01 VOL ON-OFF CONTROL DIAL

- Press the **VOL ON-OFF** control dial to turn the system on or off.
- Turn the **VOL ON-OFF** control dial right or left to increase or decrease the volume.

02 TUNE/FOLDER/AUDIO CONTROL DIAL

- To manually tune the radio, turn the **TUNE/FOLDER/AUDIO** control dial left or right.

03 CD/DVD OPEN/TILT BUTTON

- Press and hold the CD/DVD **OPEN/ TILT** button and the display screen will move down to expose the CD/ DVD insert slot.
- Press and hold the button again to tilt the screen farther.

*XM[®] Satellite Radio is only available on vehicles equipped with optional XM[®] satellite subscription service.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

PARKING BRAKE

WITH FOOT PEDAL (Continuously Variable Transmission vehicles)

- To apply, firmly depress the parking brake pedal **01**.
- To release, firmly press the foot brake **02**, then press the parking brake pedal **01** and the parking brake will release.



WITH LEVER (manual transmission vehicles)


- To apply, pull the parking brake lever **03** up.
- To release, firmly press the foot brake while slightly pulling up on the parking brake lever. Push the button **04** and lower the lever completely.



For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.

TRUNK LID RELEASE

Use one of the following methods to open the trunk:

- Push the trunk opener request switch **01** for more than 1 second while carrying the NISSAN Intelligent Key™ with you.
- Press the  button on the Intelligent Key for more than 0.5 seconds.
- From inside the vehicle, push the trunk opener switch **01** down.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



FUEL-FILLER DOOR

- To open the fuel-filler door, pull up on the release lever located on the floor to the left of the driver’s seat.
- The fuel-filler door is located on the left, rear side of the vehicle.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.



system guide

CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed.
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.

For more information, refer to the **“Starting and driving (section 5)”** of your Owner’s Manual.



BLUETOOTH® HANDS-FREE PHONE SYSTEM (if so equipped)

- With an overhead microphone and sound transmitted through the audio system speakers, the Bluetooth® Hands-free Phone System utilizes Bluetooth wireless technology and voice recognition to provide hands-free cellular phone communication.

For more information, refer to the **“Monitor, climate, audio, phone and voice recognition systems (section 4)”** of your Owner’s Manual or please visit www.nissanusa.com/bluetooth.



NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle’s position. If you have deviated from the original route, it will recalculate the route from your current location.

For more information, refer to your Navigation System Owner’s Manual.



HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

- The HomeLink® system can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as; garage doors, property gates, outdoor and indoor lights or alarm systems.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual, the HomeLink® website www.homelink.com or call 1-800-355-3515.



Nissan, the Nissan Brand Symbol, "SHIFT_" tagline,
Z and Nissan model names are Nissan trademarks.
© 2010 Nissan North America, Inc.
QR1E 0L32U2
Printing: January 2011 (16)

